Installation and Maintenance Manual

Model 2400G
Grooved Butterfly Valve
Manually Gear Operated with
Tamper Switch

MSS-SP-67 300 PSI Working Pressure

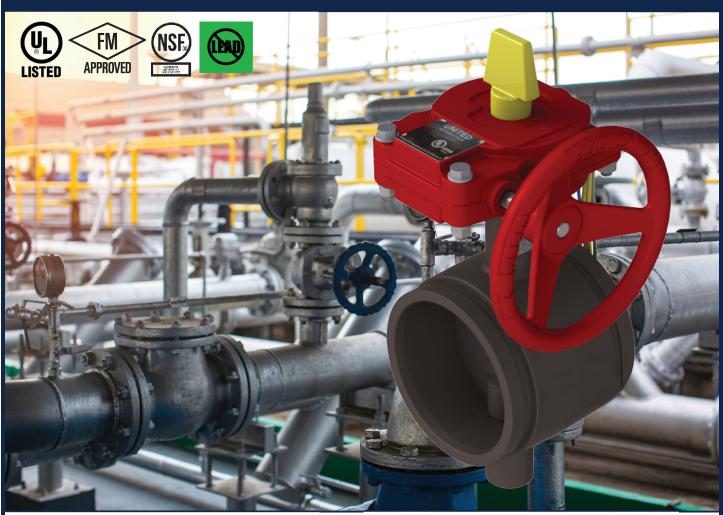




Table of Contents

1.	Product Overview			
	1.1	Application	2	
	1.2	Product Feature	2	
2.	Techn	ical Parameters	2	
	2.1	Guiding Standards.	2	
	2.2	Model Designation.	2	
	2.3	Statement of Connection.	3	
	2.4	Material Specification.	3	
3.	Super	visory Switch	3	
	3.1	Power Instructions.	3	
	3.2	Wiring Instructions.	3	
	3.3	Application Environment.	4	
4.	Instal	lation & Application	4	
	4.1	Installation	4	
	4.2	Application	5	
5.	Proble	ems and Proposed Solutions.	.6	
6	Care 4	& Maintenance	6	

1. Product Review

1.1 Application:

UNITED Grooved Butterfly Valves are designed to be used as shut-off valves or throttling valves in water supply, fire protection, and many other piping systems.

1.2 Product Features:

- a) EPDM Encapsulated ductile iron disc for bubble-tight shut off
- b) Flag type position indicator
- c) Low torque operation
- d) High cycle life
- e) Built-in supervisory switch
- f) Top flange to ISO 5211/1
- g) Working Pressure: 2"~12": 300 psi
- h) Working Temperature: 33°F to 176°F (0°C to 80°C
- i) Fusion bonded epoxy powder coated to AWWA C550
- j) UL Listed/FM Approved for indoor or outdoor use.

2. Technical Parameters

2.1 Guiding Standards:

2.1.1 Design Standards:

MSS SP-67 Butterfly Valves

2.1.2 Groove Dimension:

AWWA C606 Grooved and Shouldered Joints;

ISO 6182 Fire protection — Automatic sprinkler systems —Part 12: Requirements and test methods for grooved-end components for steel pipe systems

2.1.3 Face to Face dimension:

MSS SP-67, Table 4;

2.1.4 Pressure Testing:

Tightness Test: 1.1 times of rated working pressure;

Shell Test: 1.5 times of rated working pressure

2.2 Model Designation

Description	Model	Pressure Rating	Size Designation	Temperature
Grooved Butterfly Valve Manually Gear Operated with Tamper Switch	2400-G	300PSI	2" ~ 12"	0~-80℃

2.3 Statement of Connection

- 2.3.1 The valves are designed to be connected to the piping system with couplings;
- 2.3.2 The valves can be operated in lever handle, gear box, gear box with tamper switch, electrical actuator, pneumatic actuator, etc.


2.4 Material Specification

Part No. Part		Material Specification	
1 Valve Body		Ductile Iron ASTM A536, 65-45-12	
2	Disc	Ductile Iron ASTM A536, 65-45-12+EPDM	
3	Stem	SS431, 420, 304, 316, 416	

3. Supervisory Switch

3.1 Power Instructions: 5A 250VAC

3.2 Wiring Instructions

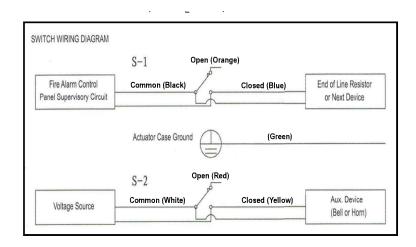


3.3 Application Environment

Both indoor and outdoor.

4. Installation & Application

4.1 Installation

- a) Check the system requirements, especially for operating pressure and temperature, and ensure it is within the performance capability of the valve being installed.
- b) Be careful when opening the packing crates to avoid damage to the valves and valve parts inside. Inspect the contents carefully prior to use.
- c) Inspect the grooves and gasket seats on the valves and adjoining pipes or fittings for burrs, cracks, or other damage; and clear away any dirt or debris.
- d) Thoroughly lubricate the coupling gasket and place over the adjoining pipe or fittings; make sure that the gasket is with even tension around the pipe.
- e) Make sure that the disc is in the closed position, so that debris cannot block the seating surface of the valve.
- f) Operate the valve to the full open and closed positions to check that it is functioning properly.
- g) Proceed to install the valve in accordance with the following 7 step illustrated guide.

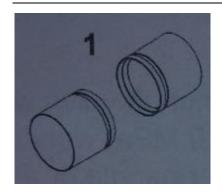







Piping checking

Gasket checking and lubrication


Install gasket

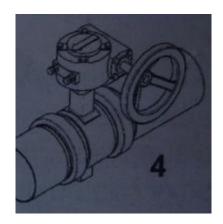


Connection of valve and piping with gasket

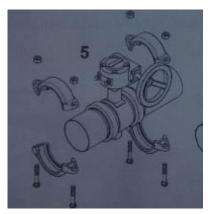

Coupling installation

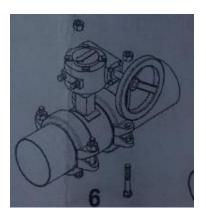

Tightening of bolts and nuts

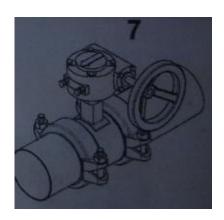

Installation completed

4.2 Application

- a) Make sure that the flow medium through the valve does not contain hard particles which might cause damage to the sealing surface.
- b) The valves should be handled carefully to avoid breakage and damage to the valve parts.
- c) Make sure that the disc is in the open position when doing piping system pressure test.
- d) For butterfly valves with bypass, open the bypass first before opening the valve.
- e) If the valve is heavy, prepare support first before installation

5. Problems and Proposed Solutions

Possible Problems	Possible Causes	Proposed Solutions
	1. debris lodged in the waterway	1. Clear out the impurities;
Sealing Surface	around the seating area;	2. Change valve seat
leakage	2. Sealing surface damaged;	
leakage	3. Sealing surface worn out during	
	operation	
Lever handle not	1. Stem is damaged or there are	1. Check the stem area and
flexible or disc not	impurities around stem;	remove the impurities;
able to open or close	2. Stem is crooked;	2. Change for a new stem
well.		

6. Care & Maintenance

- a) These valves should be stored in a cool and dry environment, with the two ends well protected from entering of impurities; When the valves are in storage for more than 6 months, check every 6 months the condition of the valves;
- b) Disc of the butterfly valves are designed to be installed aligned with the diameter of the pipelines. The discs are operated 0~90 °axially around the stem, and when it turns 90 °, the valves come to a fully open position.
- c) For manual operation, the valve opens when operated anti-clockwise and the valve closes when operated clockwise; for operation with electric actuator, need to follow the instruction of the actuator.